

1.

Enter/Exit Configuration Mode



2.

Recall Defaults



3.

Enter/Exit Configuration Mode



4.

Enable Uni-Directional USB
Serial Emulation Mode

